

Industrial Installation Procedure



Place the baseplate onto the roof and mark the hole to be cut. ensure that the baseplate is pushed under the ridge cap.



Cut the marked hole square with an angle grinder




Bend the sheeting back at the bottom end of the cut out and remove closure from under ridding



Insert closure at the bottom end of baseplate and pop rivet the baseplate onto the roof



Waterproof baseplate using silicon or membrane and sealer

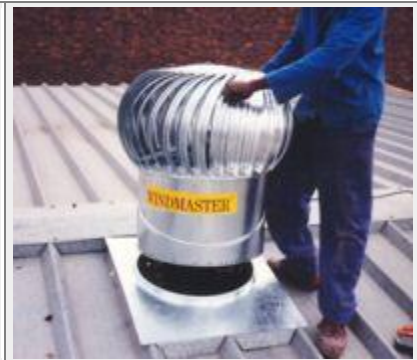

Place the throat and dome section onto the baseplate



Make sure that the locking brackets are loose



Adjust throat in order to get the top section of the throat and the dome in a level position



Fasten the locking brackets



Fix the throat onto the baseplate by drilling and using pop rivets



If more than one unit is required stagger the units across the roof